




# SW-16


## Soffit Panel

### SW-16 Installation Guidelines

- Install the first panel making sure the panel is square to the fascia, soffit or wall. It is crucial that the first panel be straight and square with the building as it influences the alignment of the following panels. Fasten panels with #12 x 1" Panheads (or equal) into fastening flange at the ends or 2' O.C. (see Detail 1). **Note: Do not overtighten screws.**

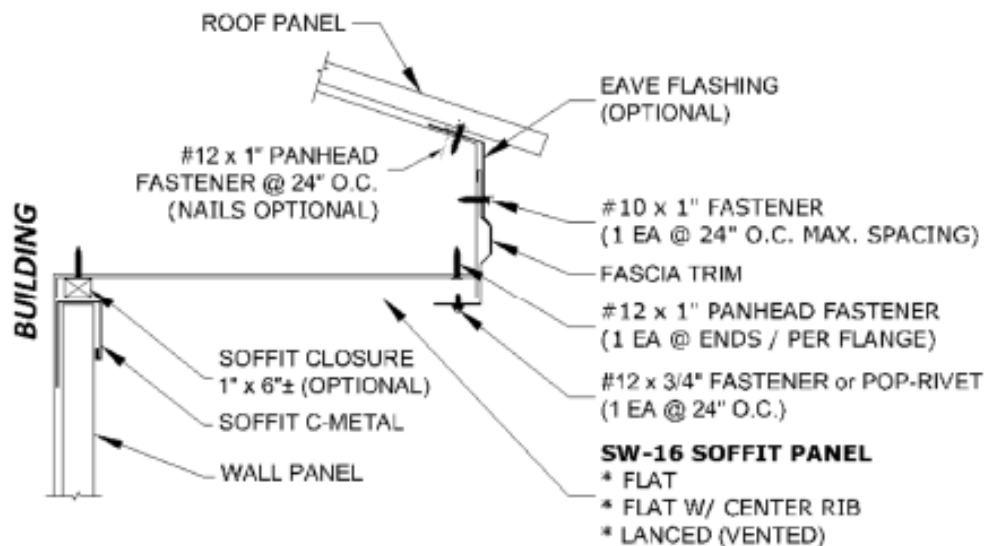

- Install soffit closure (optional) in the center of the panel nearest the building end to assist in eliminating panel deflection.

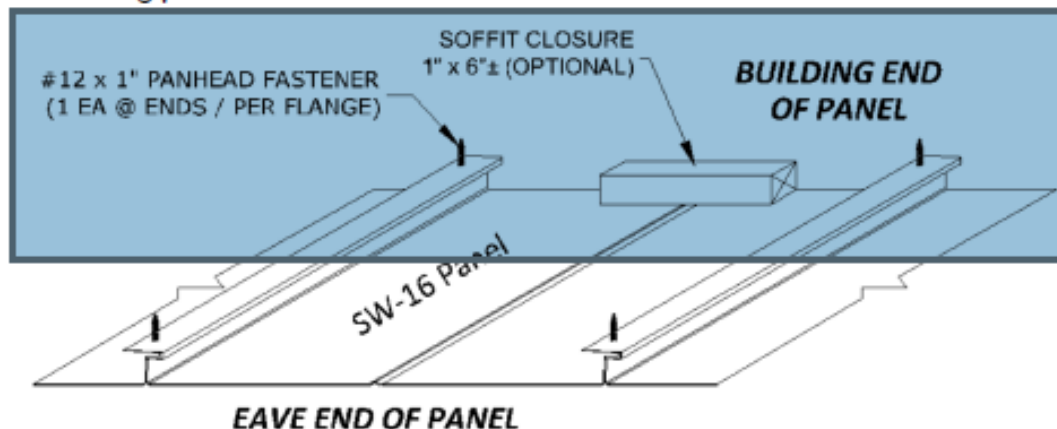

1010 North Nelson St. Spokane, WA 99202 Phone: (509) 535-8667 Toll Free: (800) 238-4057  
WWW.GO-RSP.COM or WWW.RSPSS.COM